


HOW TO ASSEMBLE OVERHEAD CABINETS

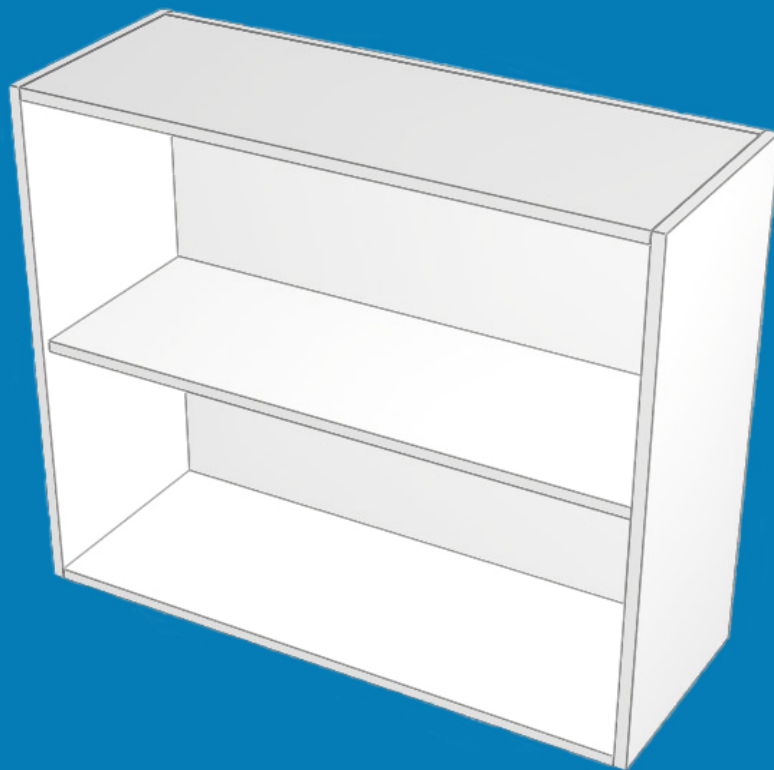

Tools Required:



Electric Drill

+ Phillips screwdriver bit

+ 3mm Countersink bit




Mallet

Step 1:

Locate all the required parts for your eKitchens cabinet.

You will need:

1. Top Panel
2. Bottom Panel
3. Right Side Panel
4. Left Side Panel
5. Back Panel
6. Screws

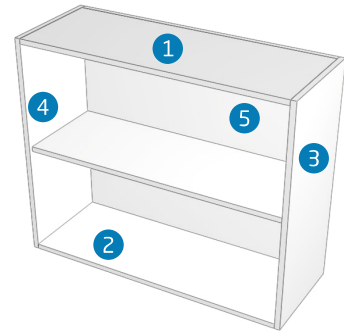

Important Information: READ FIRST

~Always pre-drill for screws first using the 3mm Drill Bit.
~Ensure all edges are flush before fixing pieces in place.
~If screw holes are seen along the mortise & Tenon inside the cabinet, the shelf/panel needs to be flipped around the other way.
~To determine the top & bottom of the cabinet, the shelf holes are always closer to the bottom.

Step 2:

Lay the back panel flat on surface with grooves facing upwards.



Step 3:

Attach the top panel & bottom panel using the Mortise & Tenons.



Step 4:

Attach the left & right side panels using the Mortise & Tenons. Ensure the seen (ABS edged) ends are all at the bottom of the cabinet & the raw ends are all at the top of the cabinet.

*See *Important Information* for top & bottom.




Step 5:

Ensure all edges are flush using the rubber mallet as needed and screw both left & right side panels in place using 45mm screws.



Step 6:

Stand the cabinet up and screw the back panel in place using 45mm screws once all edges are flush.

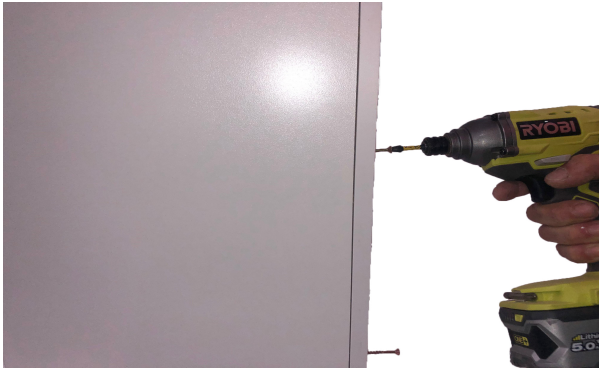

Step 7:

If required, attach any mullions by screwing in through the top & bottom panel of cabinet using 45mm screws.

*Applies to three door & four door cabinets



Step 8:

Attach hinge plates where required, ensuring the arrow on the plates is facing the front of the cabinet.



Step 9:

You have now finished assembling your eKitchens Overhead cabinet!



